

## US Operating / Care instructions Butler 720 / 722

---


### 1. Operating instructions

Butler 720 / 722, an electrically operated lifting and lowering system for installation in new or existing wardrobes.

- Press and hold the button to start the operation.
- Release the button when the clothes-rail is at the desired level.

Variants of buttons for up / down operation:

1. - Remote control
2. - Cable hand control

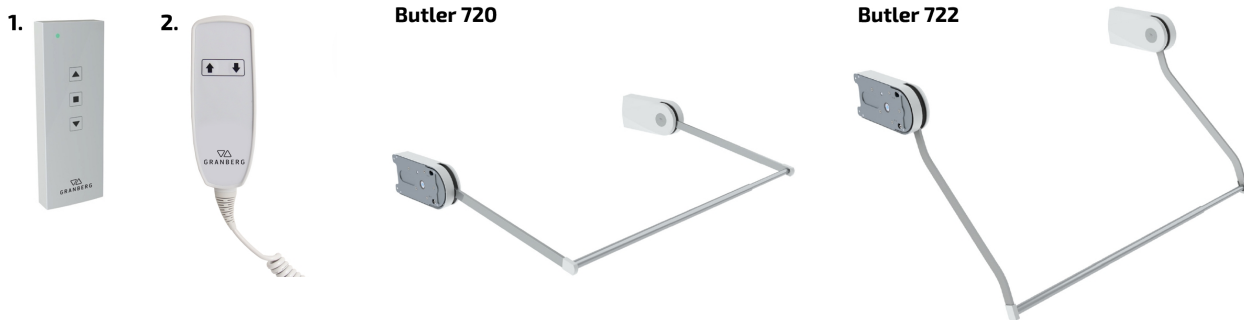

### 2. Maintenance

The Wardrobe lift is maintenance-free. Greasing and other actions are made during the manufacturing for the lifetime of the lift. From safety point of view however some components shall be inspected each year.

- Inspections, service and repair work shall be made by competent persons.
- Remove the objects from the Wardrobe lift before maintenance and repair works are made.

### 3. Functional test

Run the Wardrobe lift down and up all the way to respectively end position. Check that it moves freely, without hindrance and jarring sounds. Check that no cables are jammed.

### 4. Cleaning

Clean with lukewarm water and a non-scratching detergent containing soap or similar. Use a soft cloth or similar. After cleaning the surfaces shall be dried to avoid lime deposits.

**Scratching detergents or tools e.g. steel wool may not be used.**  
**Consider that the product contains electrical components.**

## 5. Service & maintenance records

Order	Serial	Date
<b>Date</b>	<b>Date</b>	
<b>Sign</b>	<b>Sign</b>	
<b>Remarks</b>	<b>Remarks</b>	
<b>Date</b>	<b>Date</b>	
<b>Sign</b>	<b>Sign</b>	
<b>Remarks</b>	<b>Remarks</b>	